





DK083 Rhino-Rack VA, Aero, Euro & HD crossbar instruction


IDENTIFICATION CHART

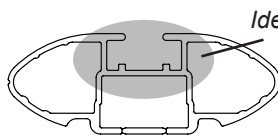


VA crossbar

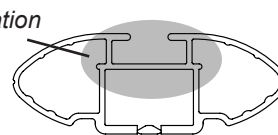







AERO crossbar



EURO crossbar



HD crossbar

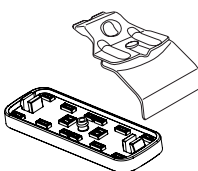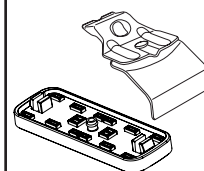			FRONT CROSSBAR						REAR CROSSBAR					
					 VA	 AERO  EURO	 HD				 VA	 AERO  EURO	 HD	
Vehicle	Date	Crossbar	Front Right Pad/ Clamp	Front Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction	Rear Right Pad/ Clamp	Rear Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction
Fiat Punto 5dr hatch	07/06 on	1180mm	M365 114498		156mm	101mm	880mm / 34,21/32"	OUT	M365 114496		130mm	75mm	828mm / 32,39/64"	OUT
			Pad Arrow FORWARD						Pad Arrow FORWARD					




DK083 Rhino-Rack VA, Aero, Euro & HD crossbar instruction

Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.


Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

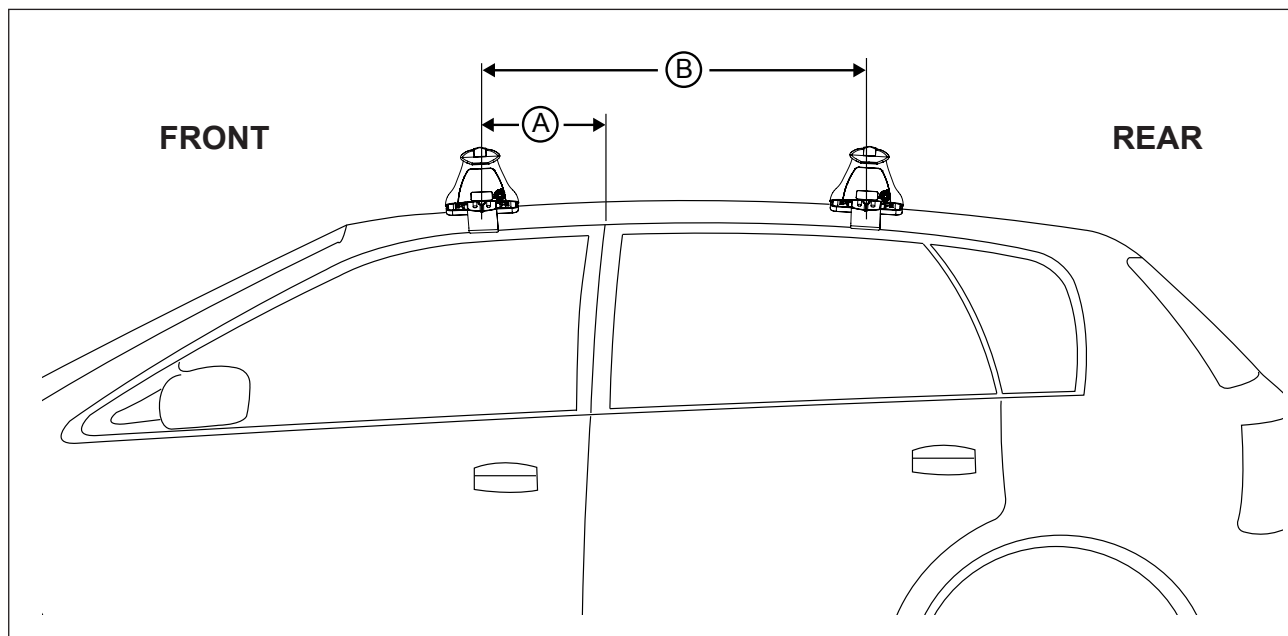

Direction of Pad Arrow and Foot Plate Arrow

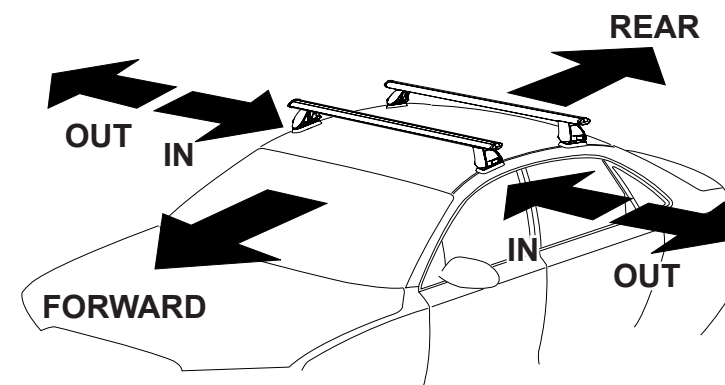

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)
Fiat Punto 5dr hatch	07/06 on	230mm / 9,1/16"	750mm / 29,17/32"	50kg / 110lbs